



PYROCLASSIC FIRES

INSTALLATION INSTRUCTIONS

Model: Pyroclassic IV

PLEASE ENSURE THIS SET OF INSTRUCTIONS REMAINS WITH THE OWNER TO READ



IMPORTANT NOTE

The Pyroclassic IV fire should be installed in accordance with UK regulations.

We strongly recommend that an approved qualified installer is used to install your Pyroclassic IV fire.

*Under no circumstances should any modification be made, or parts removed.
Doing so will result in the voiding of your fire's warranty.*

Pyroclassic Fires UK Ltd
Lowton Cottage
453 Newton Road
Lowton
Warrington
WA3 1NZ
www.pyroclassic.co.uk

TIPS ON INSTALLATION

POSITION THE FIRE

Using the previous technical specification sheets identify where the Pyroclassic IV fire is to be situated. Note: We have supplied 2 x 10mm steel rods (attached to the outside of palletized box). Push the rods through the two 11mm holes located in the front plate and engage the corresponding 11mm holes in the rear plate. The projecting ends of both rods can now be used as carry rods. To make the whole unit lighter, the top cooking plate can also be carefully removed-make sure that the insulating kaowool in the top chamber is not disturbed. Replace the cook top when fire is in position.

LOWER HEAT SHIELD

The lower heat shield should be placed on top of the feet when the fire is in its final position. If you are installing the fire angled into a corner, make sure the lower heat shield is already in place before finishing the flue, otherwise the angle of the wall may make it impossible to slip into place.

INSULATING HEARTH (NOT SUPPLIED BY PYROCLASSIC)

The Pyroclassic IV must sit on an insulating hearth with a minimum distance of 369mm in front of the heater when the hearth is installed **flush** with the surrounding combustible floor. The width of the floor protector shall be no less than the width of the Pyroclassic and shall extend not less than 200mm each side of any ash-removal or fuel loading openings unless the floor protector forms an abutment with a wall or heat shield at a lesser distance.

PYROCLASSIC RAISED HEARTH

Using the raised hearth allows the above mentioned 369mm distance at the front of the fuel loading and ash removal opening to be reduced. The Pyroclassic Hearth is raised 250mm from the floor thus reducing the distance at the front of the door opening to 300mm.

The Pyroclassic Hearth measures 250mm (H) x 680mm (W) x 950mm (D). Note: A marking hole is located on top of the hearth that indicates the exact centre of the inner 100mm flue used with the Pyroclassic IV, you can use the measurements shown on our specifications pages to help position the hearth prior to installing the fire. Place the hearth into position and bolt or screw into floor in four places (fixings not supplied, installer to decide what to use). Also note there are 4 cups on the top of the hearth, these cups are used to receive the adjustable feet on the fire. Split pins are provided for the rear feet only to allow the fire to be anchored to the hearth, these act as the earthquake restraints meaning you don't need to use the fixing slots in the back plate.

PYROCLASSIC WOODBIN

The woodbin supplied is designed to slide under the Pyroclassic Hearth. If the woodbin is used with a wooden or concrete floor we have supplied 5 carpet squares which should be adhered to the underside of the woodbin, avoid sticking them too close to the edges as they can then be easily seen.

POWDER COATED PANELS

Insert the side panels before the front and rear panels. The front and rear panel are supplied inside the fire chamber.

UNPROTECTED WALLS

Minimum unscreened clearances are 350mm from the back of the Pyroclassic IV fire to the wall and 480mm from the side of the fire to any side wall. For a corner installation with the Pyroclassic IV angled at 45 degrees to the wall the minimum unscreened clearance from the walls is 370mm, measured from the rear corners of the heater to the wall.

PYROCLASSIC STANDARD WALL SCREEN

Please see 'Pyroclassic Fires Wall Screen Installation Instructions' provided with your wall screen or online at <http://www.pyroclassic.co.uk/resources/downloads/>.

HOTFLOW WETBACK

See separate instructions which will be attached to your wetback or online at <http://www.pyroclassic.co.uk/resources/downloads/>.

WARNING: IF YOU HAVE NOT CONNECTED YOUR WETBACK TO YOUR WATER CYLINDER-

DO NOT LIGHT THE FIRE

END OF JOB CHECKLIST

This list is for you to use as a quick reference to ensure all jobs have been completed prior to you leaving the site, please ensure that all the following tasks have been done;

- Ceiling insulation reinstated if installed
- Flue sections cleaned where required
- All instruction sheets left for operator
- Powder coated panels fitted to fire
- All warranty paperwork completed, both copies
- Rake, shovel, moisture meter and firelighters are left with fire
- Retaining screw from top plate to outlet cone fitted
- Smoke test completed

Here at Pyroclassic Fires, we would like to thank you for completing this installation of one of our fires to the highest standards. We appreciate the time you have taken to ensure this fire will give its new owner many years of service. Your efforts will help ensure a clean and healthy future for everyone!